


# GP-0908 AIR SCREWDRIVER

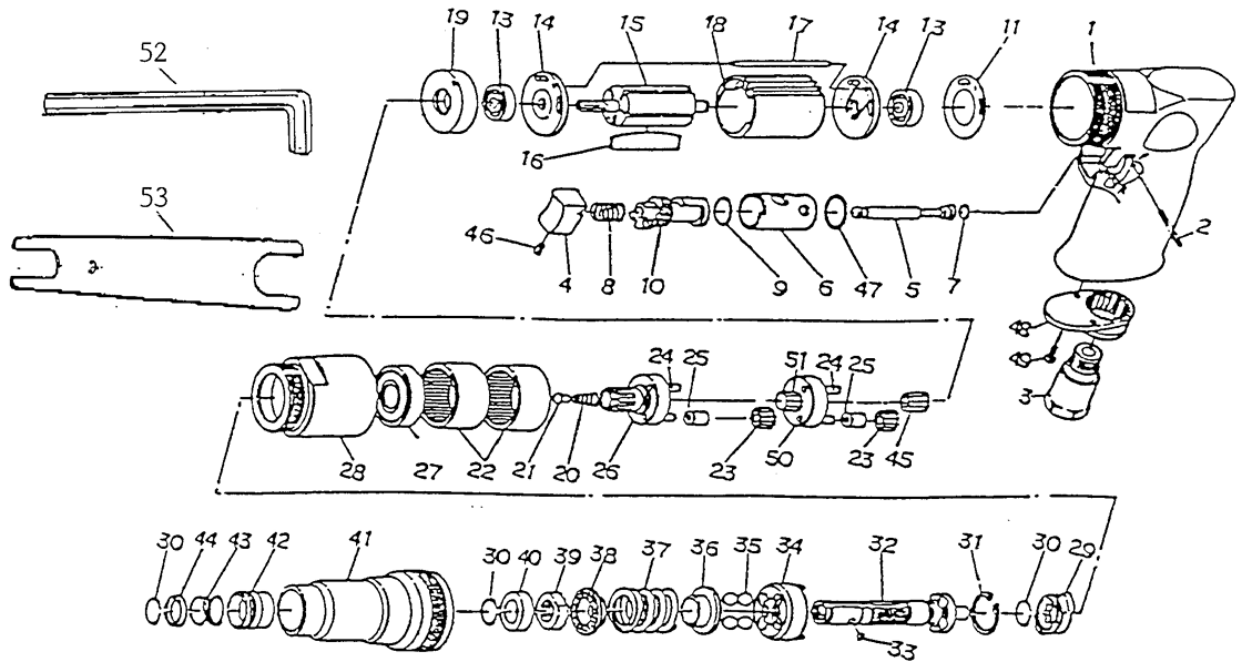

<u>PARTS NO.</u>	<u>DESCRIPTION</u>	<u>PARTS NO.</u>	<u>DESCRIPTION</u>
01.	MOTOR HOUSING	29.	DRIVE DOG
02.	PIN	30.	RETAINING RING (3)
03.	AIR INLET	31.	RETAINING RING
04.	TRIGGER	32.	CAM SPINDLE
05.	VALVE STEM	33.	STEEL BALL
06.	REVERSE BUSHING	34.	CLUTCH CARRIER
07.	"O" RING	35.	STEEL BALL (4)
08.	VALVE SPRING	36.	WASHER
09.	"O" RING	37.	SPRING
10.	REVERSE LEVER	38.	WASHER
11.	MOTOR GASKET	39.	ADJUST NUT
13.	BALL BEARING (2)	40.	SPACER
14.	END PLATE (2)	41.	CLUTCH HOUSING
15.	ROTOR	42.	BALL RETAINER
16.	ROTOR BLADES (5)	43.	SPRING
17.	PIN	44.	WASHER
18.	CYLINDER	45.	PINION GEAR
19.	SPACER	46.	SET SCREW
20.	SPRING	47.	"O" RING
21.	SPRING GUIDE	48.	EXHAUST DIFFUSER
22.	INTERNAL GEAR (2)	49.	SCREW (2)
23.	PLANET GEAR (6)	50.	REDUCTION SPINDLE
24.	PIN (6)	51.	CENTER GEAR
25.	SPACER (6)	52.	1/4" ALLEN KEY
26.	WORK SPINDLE	53.	SPANNER
27.	BALL BEARING	K2.	#23+#25 (each 1pc)
28.	CLAMP NUT		