

## EMERGENCY SWITCH


Brand: **Toku**

Product Code: **136690401**

TOKU 



TOKU 

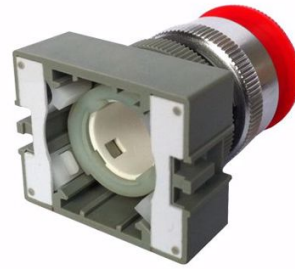

### EMERGENCY SWITCH

This is the emergency stop switch (button) assembly for TOKU Direct Pendant assemblies.

Please note there is a machined metal part that is "press fit" into the grey coloured lower part of the assembly - this metal part is NOT included in this assembly, so when servicing or replacing the emergency stop assembly be sure not to throw it away.

The machined metal part is called "Emergency Push Rod" Part# 420215V00 The second image shows the underside of the grey coloured base without the Emergency Push Rod installed...